

**PURELL® Foodservice Surface Sanitizer**  
**ACTIVE INGREDIENT CONCENTRATION TEST STRIPS**

Contents: 6 Ethyl Alcohol Test Strips  
 Reorder No. 3341-6CTSTRP

**STEP | TEST INSTRUCTIONS**

1 **Pour** a small amount of sanitizer into a clean, dry cup



2 **Remove one strip** from foil pouch




3 **Dip colored end of strip** into sanitizer for approximately **5 seconds**, without motion (do not spray test strip)




4 **Remove strip and wait 60 seconds**



5 Compare to color chart below. **Choose closest color** within 10 seconds.

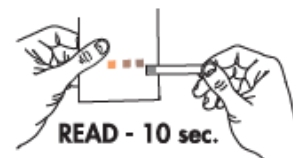

**Ethyl Alcohol % Concentration**

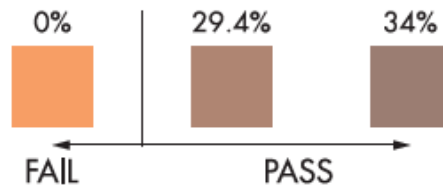

Use only with PURELL Foodservice Surface Sanitizer (EPA Reg. No. 84368-1-84150)  
 Store in cool dry place away from heat source  
 Results obtained through use of this kit are approximations and are not as precise as results derived from a certified lab analysis

Distributed by: GOJO Industries, Inc.  
 P.O. Box 991, Akron, OH, 44309 / 1-888-4-PURELL  
 ©2017. GOJO Industries, Inc. All rights reserved. made in U.S.A

R0317-PE  
 #20476 (3/2017)