



---

GOJO Industries, Inc.  
One GOJO Plaza, Suite 500  
Tel: 330-255-6000 Fax: 330-255-6119  
[www.GOJO.com](http://www.GOJO.com)  
Mailing Address:  
P.O. Box 991, Akron, Ohio 44309-0991  
*This letter was sent electronically*

**Date:** April 10, 2017  
**Subject:** **New! Active Ingredient Test Strips** for PURELL® Foodservice Surface Sanitizer

Federal, state and local health regulations require food establishments have the ability to test a surface sanitizer's active ingredient concentration level on-site.






To conduct this test, GOJO has developed a new Active Ingredient Test Strip to provide a simple, reliable and economical means to measure the ethanol concentration (29.4% ethyl alcohol) in PURELL® Foodservice Surface Sanitizer. The new test strips will replace the current Hydrometer test kit as the preferred method of testing.

Each test strip kit is comprised of six individual strips, test instructions and a color matching chart. The order number for these test strips is 3341-6CTSTRP and can be ordered as samples immediately by calling GOJO Customer Service at 1-800-321-9647


**PURELL® Foodservice Surface Sanitizer**  
ACTIVE INGREDIENT CONCENTRATION TEST STRIPS

Contents: 6 Ethyl Alcohol Test Strips  
Reorder No. 3341-6CTSTRP

**STEP | TEST INSTRUCTIONS**

1	<b>Pour</b> a small amount of sanitizer into a clean, dry cup	 <p><b>POUR</b></p>
2	<b>Remove one strip</b> from foil pouch	 <p><b>OPEN</b></p>
3	<b>Dip colored end of strip</b> into sanitizer for approximately <b>5 seconds</b> , without motion (do not spray test strip)	 <p><b>DIP - 5 sec.</b></p>
4	<b>Remove strip and wait 60 seconds</b>	 <p><b>WAIT 60 sec.</b></p>
5	Compare to color chart below. <b>Choose closest color</b> within 10 seconds.	 <p><b>READ - 10 sec.</b></p>

**Ethyl Alcohol % Concentration**

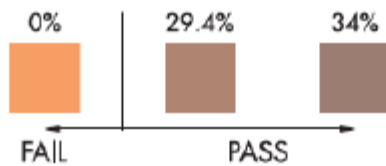

Use only with PURELL Foodservice Surface Sanitizer (EPA Reg. No. 84368-1-84150)  
Store in cool dry place away from heat source  
Results obtained through use of this kit are approximations and are not as precise as results derived from a certified lab analysis

Distributed by: GOJO Industries, Inc.  
P.O. Box 991, Akron, OH, 44309 / 1-888-4-PURELL  
©2017 GOJO Industries, Inc. All rights reserved. made in U.S.A

R0317-PE  
#20476 [3/2017]